

# Daytime running light relay PT 31

**VihterPAL**

- ☞ Lights switch on after the engine is started.
- ☞ No more forgotten lights and empty batteries.

Suitable for most types of cars, ind diesel cars.

Starts appr 4 seconds after the activation of the oil pressure or battery charging warning lamp.

Upon switching on the tail lamps the head lamps go off.


When the engine accidentally stops, the head lamps do not switch off.

Low power consumption.


Does not overload the electric circuitry of the car.

Size (HxWxD) 23x90x55.


Installation time approximately 0,45 hour.

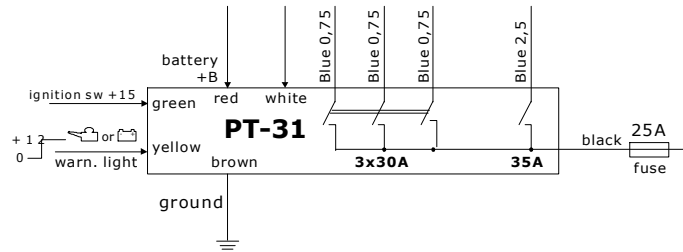


## Main switch is on negative wire

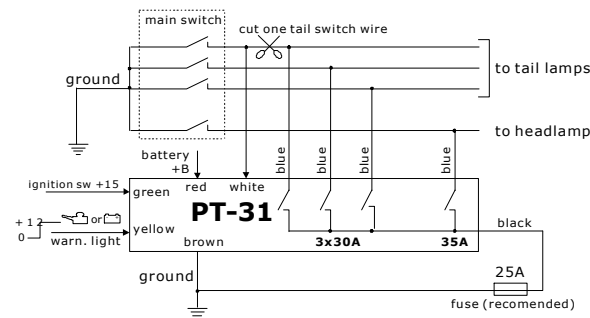

## Main switch is on positive wire


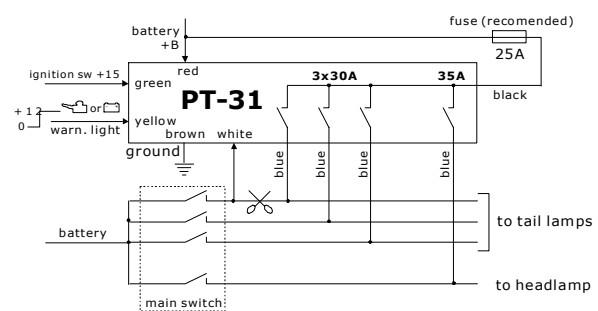


## Lights are switched by relays

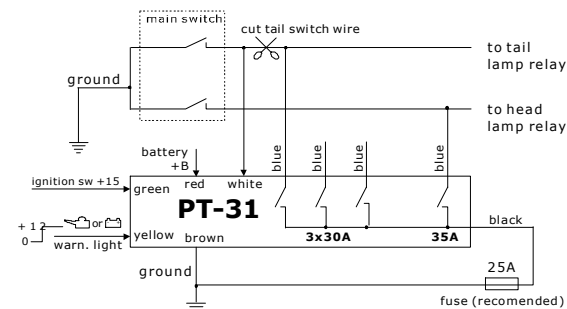

## Simplified installation

 Both green and yellow wires may be connected to ACC or + 15 terminal in ignition switch. In that case headlamps switch on in a few seconds after 12V has reached ACC or + 15 terminal respectively.

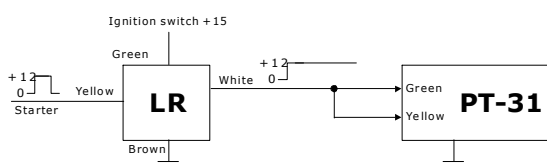

Additional so called locking relay LR is available for diesel cars. It is connected between the starter terminal in ignition switch and the input (yellow and green wires) of the automatic relay PT-31.